

Esse

700 27B MODEL
Roomheater with boiler



WOOD BURNING ONLY MODEL



ESSE STOVES & COOKERS

Long Ing. Barnoldswick, Lancashire BB18 6BN. United Kingdom.

Tel: + 44 (0) 1282 813235 F: + 44 (0) 1282 816876

enquiries@esse.com www.esse.com

**INSTALLATION & OPERATING INSTRUCTIONS
FOR THE ESSE 700 27B MODEL
U.K. & Ireland
READ THESE INSTRUCTIONS AND SAVE FOR REFERENCE**

Contents

Safety Notes

Page 3

INSTALLATION INSTRUCTIONS

Page 4

Chimney and Flue

Page 4

Flue and Draught Measurement

Page 5

Flue Diagnosis

Page 6

Flue Stabiliser

Page 7

Installing the stove

Page 7

Positioning

page 7

Hearth

Page 7

Flue connection

Page 8

Important installation notes

Page 8

Positioning internal components

Page 8,9,10

Stove outputs

Page 11

The domestic and central heating system

Page 11

Final Checks

Page 12

Boiler Tapping

Page 12

OPERATING INSTRUCTIONS

Page 14

Wood

Page 15

• Lighting and controlling the fire

Page 15

• Correct running temperatures for wood burning

Page 17

• Extended burning

Page 17

• Types of wood for fuel

Page 17

Stove Guarantee

Page 19

SAFETY NOTES

- Properly installed, operated and maintained, this appliance will not emit fumes into the dwelling. However occasional fumes from de-ashing and re-fuelling may occur. Persistent fume emission is potentially dangerous and must not be tolerated. If fume emission does persist, open doors and windows to ventilate the room. Let the fire burn out or eject and safely dispose of fuel from the appliance. Once the fire is cold, check the flue and chimney for blockages and clean if required. Do not attempt to relight the fire until the cause of the fume emission has been identified and corrected. Seek expert advice if necessary.

- Do not fit an extractor fan in the same room as the appliance.

- An adequate air supply for combustion and ventilation is essential. Air openings provided for this purpose must not be restricted. This appliance requires an air supply of 100 square cm.(16 Square Inches) in order to provide an adequate amount of air for successful combustion.

- It is important that flue ways are cleaned frequently and the chimney swept regularly. Also the stove must be maintained in good mechanical order. Regular sweeping will mean at least once per year.

- If the chimney was previously used for an open fire, it is possible that the higher flue gas temperatures generated by the stove may loosen deposits that were firmly adhering to the inner surface of the chimney and cause blockage of the fluepipe. We recommend that in such a situation a second sweeping of the chimney should be carried out within one month of regular use of the stove after installation. Also, lock or remove any existing dampers in the flueway.

- Should it be likely that children, aged or infirm people approach the fire, then a fireguard should be fitted.

- Avoid the use of aerosol sprays in the vicinity of the stove when it is in operation.

Installation Instructions

The installer has a responsibility under the Health and Safety at Work Act 1974 to provide for the safety of persons carrying out the installation. Attention is drawn to the fact that fire cement is caustic and hands must be washed thoroughly after use. The appliance is heavy and care must be taken during handling. Although the appliance does not contain asbestos products, it is possible that asbestos may be disturbed in existing installations and every precaution must be taken

.Please Observe The Above.

These instructions give a guide for the installation of the appliance but in no way absolves the installer from responsibilities to conform to British Standards, in particular BS8303 and BS6461, relating to the installation of solid fuel appliances. The installation should also comply with local Building Regulations and Local Authority Bye-Laws.

The stove must be placed at least 40cm away from any combustible materials. If necessary, any adjoining walls should be protected from the effects of heat.

Chimney and Flue

The successful operation of this stove relies on the adequate performance of the chimney to which it is connected. The chimney must:

- Have an internal cross section of no less than 320 cm.sq (200mm Dia.). (If a flue liner is used it should be 6" diameter for the 700 17B stove, and suitable for wood burning).
- Be a minimum 4.6m high from hearth level to pot.
- Be terminated at least 1m above roof level so that the chimney does not terminate in a pressure zone. See Figure.1
- Be free from cracks, severe bends, voids, and obstructions.
- Be connected to the one appliance only.
- New chimneys must be built in accordance with local building regulations.
- Existing chimneys must be tested in accordance with HETAS requirements.
- If the stove is installed as a free-standing appliance, it should not support any part of the chimney.
- Voids in the chimney should be avoided, as these will prevent a steady flue draught. The stove flue pipe should pass beyond the narrowing of the chimney. See Figure 2
- Consideration should be given to falling soot. For rear outlet stoves it may be necessary to provide a soot catchment area in the flue pipe so that soot does not settle in the path of the flue gases. A flue/chimney access point may also be required so that the state of the chimney can be checked and any fallen soot removed.
- External flues must be insulated to prevent heat loss.

Fig: 1- Chimney and flue performance.


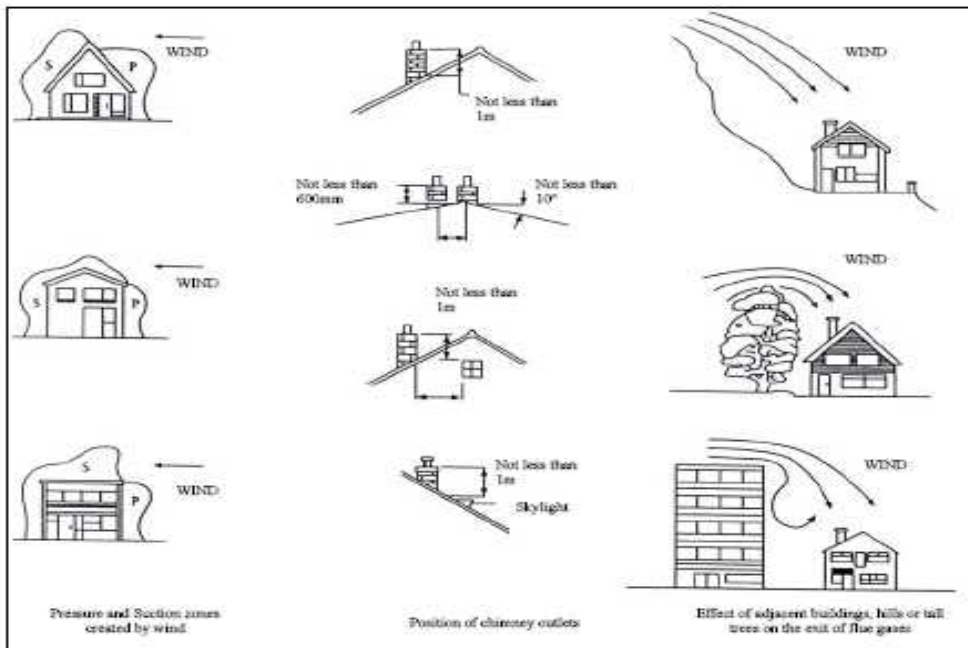


Fig: 2-Top flue installation only 700 17B model

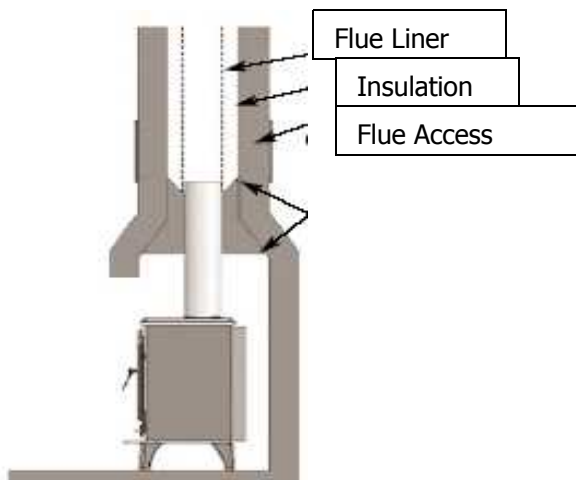

Flue Draught Measurement

The chimney can be checked, before the stove is installed, with a smoke match. If the chimney doesn't pull the smoke it may suggest the chimney needs attention (see the Flue Diagnosis Table below).

Note: This test is only a guide as an apparently poor flue may improve once the stove is installed, lit and the flue is warmed. If, once the stove is installed, there is any doubt that the chimney is providing an adequate draught, a flue draught

reading can be taken with the stove lit. Two flue draught readings should be taken, one with the stove at minimum firing rate and one at maximum firing rate.

Measurement

The flue draught test hole must be drilled in the flue pipe as close to the stove as possible and before any flue draught stabiliser.

Minimum

The stove should be lit and allowed to warm the flue thoroughly. The air controls can then be set so that the stove burns on a low setting. Allow the burning rate to become steady. The flue draught reading should now be taken with the thermostatic air intake closed and the airwash control fully open.

Maximum

The thermostatic air intake can now be opened to allow the stove to burn at maximum rate. Give the stove some time for the burning rate to become steady, make sure the airwash control is fully open and take a flue draught reading immediately.

Ideally, the flue draught readings should range between 1mm wg and 2.5mm wg. Any readings significantly outside this range may indicate the need for remedial action.

If the draught reading is excessive then a draught stabiliser should be fitted to achieve better fuel burning rates.

Lack of draught or downdraught should be avoided for satisfactory performance

Flue Diagnosis

Fig 3: Chimney conditions.

Low flue draught—symptoms: difficult to light and smoke coming into the room.	
Cause	Remedy
Cold chimney	Line the chimney
Chimney too short	Extend the chimney
Down draught	Relocate/extend the chimney terminal. Fit an anti down draught cowl
Chimney diameter too large	Line chimney
Chimney obstruction	Clear/sweep chimney
Restricted air supply	Check for competing draughts (other chimneys, extractor hoods/fans), Fit an air vent if the room is sealed.
High flue draught—symptoms: fire difficult to control, fuel will not last, stove too hot, stove damage, chimney fire	
Cause	Remedy
External wind conditions combined with chimney terminal	Fit stabilizer cowl. Fit flue draught stabilizer.

Flue Stabilizer

A flue stabilizer can be fitted to reduce the draught through the stove if the flue draught is too high.

The flue stabilizer should be;

- fitted in the same room as the stove,
- the same size as the flue pipe, and
- fitted no closer than 700mm to the flue outlet of the appliance.

Installing the stove

Fig: 4

Clearances from combustibles

Clearances in mm	
Side	400
Rear	400
Top	450
Front	305

Positioning

Figure 4 shows recommended distances between the stove and surrounding combustible materials. As a rule, any surrounding combustible material should not exceed 80°C. There should be sufficient space around the stove for service work.

Hearth

The construction of the hearth must conform to Building Regulations, must be firm, non-combustible and capable of supporting the stove. The hearth must be fire proof to at least 50 degrees Centigrade. Relevant Building Regulations relating to hearth should be observed. The minimum hearth thickness is 13mm.

Over The Stove

When a Wooden mantle is intended to be installed, at least 18-24" (460-600mm) clearance is required to the stove. It may also be required to fit heat shields in relevant areas.

Flue connection – 700-17B model Stove

The flue pipe used to connect the stove to the chimney is 6"(150mm) diameter. The stove is supplied ready for top flue connection complete with a 5-6" adaptor. Figure 2 (left hand side illustration only) shows a suitable flue connection.

Important installation notes:

1. The installation must allow for adequate chimney sweeping.
2. Avoid using bends greater than 45° to the vertical. All pipe flue sections should be as close to vertical as possible.
3. All joints in the flue system must be effectively sealed.
4. All flue sockets must face upwards.

On completing the installation, check that all the internal components of the stove are positioned correctly:

Check - ash pan, steel plate, cast grate, perforated sides and back, side/back bricks vermiculite and metal, front bar, secondary air tube & clip.



View of firebox



Perforated sides and back



Vermiculite/metal side front



Vermiculite/metal side rear



Ashpan




Steel plate

Cast plate



**Front Ba
Operati**

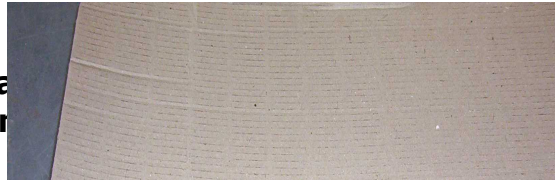

Secondary Air Tube

Boiler



Boiler

Boiler

Fig 5

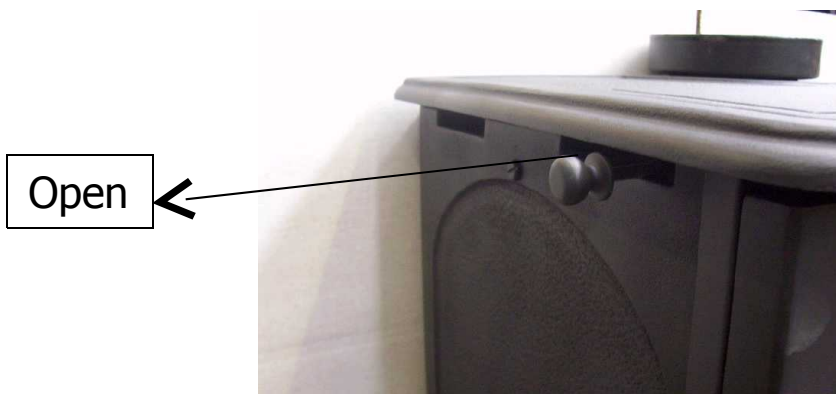


Fig: 6 - Secondary air control – 700 17B model Stove

Stove Outputs

The maximum Output of the 700 17B Model is 8.0 kW (27,296 Btu/h) to water and 9.0kW (30.700 Btu/h) to the room. The figures are based upon burning 5.0Kg of wood/hour with all controls open and doors closed. The minimum output

is 3.75Kw (12,800Btu's/h) to water with all controls closed using the same fuel load. The water capacity of the boiler is 7.1 litres.

The Domestic and Central Heating System

The domestic and central heating system must comply with BS:5449 Part 1. When fitting a joint central heating & domestic hot water system, it must be a double feed indirect hot water system storage type incorporating rust inhibitor to prevent corrosion & scale(normally gravity primary & pumped domestic) A distance of 50 feet in height between the flow tapping and the header tank is the maximum permissible.

The system should include a heat link radiator to dissipate excess domestic hot water when required. Also an injector tee should be fitted to promote an adequate supply of domestic return water, when the heating system is in operation.

The Boiler Tappings are 1" diameter BSP and should be connected so the primary flow and return pipes rise continuously to the open vent.

In order to promote a warm return water temperature a pipe thermostat should be fitted on the domestic return and set at 45 degrees centigrade. Other controls such as a pump programmer, room & radiator thermostats can all be utilised without affecting the appliance thermostatic air control.

Important.

 

A warm return water temperature to the boiler is essential when burning wood to avoid the build up tar/resin & condensate forming on the boiler surfaces and firebox. A suitable pipe thermostat or other means should be attached to control the temperature of the return water. Failure to observe this warning could result in cooler water temperatures and extensive boiler damage as well as negating your stove guarantee.

Final Checks

After the system has been filled with water, light the appliance and check that all combustion products are being taken from the appliance and exhausted up the

chimney. The water flow rate should be adjusted to suit the circuit and the whole system balanced properly.

Boiler Tapping Information.

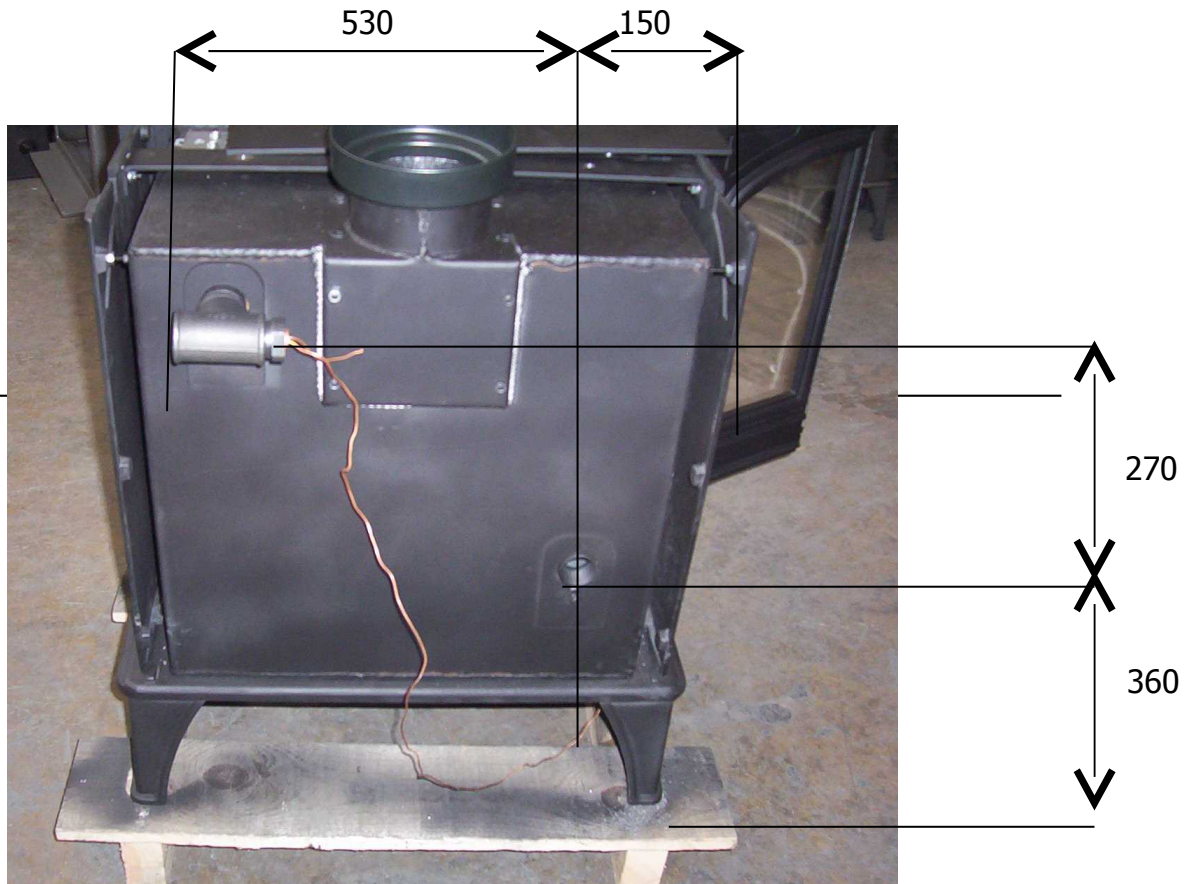

Ouzledale Foundry Co Ltd, Long ing, Barnoldswick, Lancashire BB18 6BN England
Http: //www.esse.co.uk

05/07